

Error message when a SP above the upper limit is entered



Faceplate2

FC401

35.1 180.07  
% MSCFH  
100.0 350.00

REQ. MODE  
RCAS

CAS  
AUTO  
MAN  
AUTO

180.00

0.0 0.00

Ask Alarm Help

Unit:

Owned by:  
Modelock Override

SP limits **move** with the SP and are calculated using the SP tolerance

Detail2

FC401

| I/O        | THRESHOLD | DIAGNOSTICS | NO DATA       |
|------------|-----------|-------------|---------------|
| INTERLOCKS | TUNING    | VARIABLES   | ALARMS/LIMITS |

| Description  | Value |      |
|--------------|-------|------|
| SP Tolerance | 15    | TP01 |
| Max SP       | 320   | TP02 |
| Min SP       | 55    | TP03 |

Absolute highest SP limit

Absolute lowest SP limit



Error message when a SP below the lower SP limit is entered